

Panasonic®

Operating Instructions CD Stereo System

Model No. **SC-EN17**



These instructions are applicable to the following systems.

System	SC-EN17
Main unit	SA-EN17
Speakers	SB-EN17

SC-EN17 for U.S.A. and Canada is used in the illustrations unless otherwise mentioned.

Dear Customer

Thank you for purchasing this product.

Before connecting, operating or adjusting this product, please read these instructions completely.

Please keep this manual for future reference.

Troubleshooting guide

Before requesting service, make the following checks. If you are in doubt about any of the check points, or if the solutions indicated in the chart do not solve the problem, refer to the "Customer Services Directory" on page 8 if you reside in the U.S.A., or refer to the "Product information" on page 7 if you reside in Canada. In other areas, consult your dealer.

No play.	<ul style="list-style-type: none">• The disc isn't correctly set.• The disc is scratched or dirty. (Tracks skipped.)• There is moisture on the lens. Wait for about an hour and then try again.
MP3 cannot be read.	<ul style="list-style-type: none">• You may not be able to play MP3 if you have copied a multi-session disc that has no data between sessions.• When creating a multi session disc, it is necessary to close the session.• The amount of data on the disc is too small. Set the amount of data to greater than approximately 5 MB.
Sound is unfixed, reversed or comes from one speaker only.	<ul style="list-style-type: none">• Check the speaker connections. (→ page 2)
No sound or there is a lot of noise.	<ul style="list-style-type: none">• Noise may occur when playing MP3 if recording quality is poor.• Keep this unit away from mobile telephones.• Turn the volume up.• Switch the unit off, determine and correct the cause, then switch the unit on. Causes include shorting of the positive and negative speaker wires, straining of the speakers through excessive volume or power, and using the unit in a hot environment.
Humming heard during play.	<ul style="list-style-type: none">• An AC power supply cord or fluorescent light is near the cords. Keep other appliances and cords away from this unit's cords.

This product may receive radio interference caused by mobile telephones during use. If such interference is apparent, please increase separation between the product and the mobile telephone.

A beat sound is heard while receiving a radio broadcast.	<ul style="list-style-type: none">• Switch the TV off or separate it from the unit.
A low hum or noise is heard during AM broadcasts.	<ul style="list-style-type: none">• Keep the antenna away from other cables and cords.• Keep the AM antenna away from the unit.
The picture on the television near the set disappears or stripes appear on the screen.	<ul style="list-style-type: none">• The location and orientation of the antenna are incorrect.• The TV antenna wire is too close to the unit. Separate the antenna wire of the TV set from the unit.
Remote control doesn't work.	<ul style="list-style-type: none">• Check that the batteries are inserted correctly. (→ page 2)• Replace the batteries if they are worn.

Display

--:--	<ul style="list-style-type: none">• You plugged the AC power supply cord in for the first time or there was a power failure recently. Set the time. (→ page 5)• The total programmed play time is more than 200 minutes. Tracks can still be programmed and played.
PGM FULL	<ul style="list-style-type: none">• The number of programmed tracks is limited to 24. No further tracks can be programmed.
NOT MP3	<ul style="list-style-type: none">• A CD-ROM disc that is not CD-DA or MP3 format is inserted. It cannot be played.
ERROR	<ul style="list-style-type: none">• Incorrect operation performed. Read the instructions and try again.
F76	<ul style="list-style-type: none">• There is a power supply problem. Consult the dealer.

Panasonic Consumer Electronics Company, Division of Panasonic Corporation of North America
One Panasonic Way Secaucus,
New Jersey 07094
<http://www.panasonic.com>

 
For units with PX printed on the outer packaging

Matsushita Electric Industrial Co., Ltd.
Corporate Management Division for the Americas
Sales Office for North America
Tokyo Panasonic Sales Section

32nd Floor, World Trade Center 4-1, Hamamatsu-cho, 2-Chome, Minato-Ku, Tokyo 105-6132, Japan

Panasonic Puerto Rico, Inc.
Ave. 65 de Infantería, Km. 9.5
San Gabriel Industrial Park, Carolina,
Puerto Rico 00985

Panasonic Canada Inc.
5770 Ambler Drive
Mississauga, Ontario
L4W 2T3
www.panasonic.ca



CD operations

1 Insert the CD.

Main unit **Remote control**

You cannot use an 8 cm (3") disc.

The unit comes on and the CD lid opens.

Label must face outward.

Put the CD in the pocket.

Press [▲] again to close.

Keep fingers away from the CD lid when it is closing to avoid possible minor injury.

2 Start play.

Main unit **Remote control**

Elapsed playing time of track
Track number

1 0:01

Note
If the CD is already in the unit, the unit comes on and play begins.
(One touch play)

To turn on the unit
POWER

To stop play

To skip/search

To adjust the volume
- VOLUME +
VOL 22
0 (Minimum) 50 (Maximum)

Input using the numbered buttons
To select a 2-digit number
e.g. 16: [≥10] → [1] → [6]
To select 3-digit number
e.g. 226:
[≥10] → [≥10]
→ [2] → [2] → [6]

To adjust the volume

Stop

Main unit **Remote control**

Number of tracks
Total play time
14 40:21

Number of albums
Number of tracks
MP3 ALBUM 2 TRACK 10

Pause

Main unit **Remote control**

CD

Press again to resume play.

Skip/Search

Main unit **Remote control**

Press to skip/
Press and hold to search

Note

- You can search during play or while paused.
- You cannot search through MP3 files.
- You can only search within the current track during program play, one track repeat, and random play.

Direct access play

Play starts with the track you select.

Select the desired track

Repeat play/ random play

1-: One track repeat
: All track repeat
RND: Random play

PLAY MODE
Select the play mode

• Each time you press the button:
1- → → RND
(While stopped)
No display (Canceled)

Note

- During random play, you cannot skip to the previous track.
- You cannot select "RND" while playing MP3.
- You cannot use random play and program play at the same time.

Program play

This function allows you to program up to 24 tracks.

PGM/CLEAR
-AUTO PRESET

Press while stopped

PGM

Select tracks
(Maximum 24 tracks)

Track number
Sequence number
Track number
Total play time

(CD only)

• **Erase a program**
(While stopped)

Note

Program contents are stored in the unit's memory even after changing to a different function or turning the unit off. All program contents are erased by pressing [PGM/CLEAR] or by opening the CD lid.

• **Confirm a programmed track**
(While stopped)

• **Add a program track**
(While stopped)

Select the track you want to add



Note

- You cannot use random play and program play at the same time.

Refer to page 6 regarding MP3 play.

Radio operations

Radio stations can be tuned manually by selecting the station's frequency or they can be preset into channels to make it easy to tune. You can preset up to 20 FM channels and up to 12 AM channels.

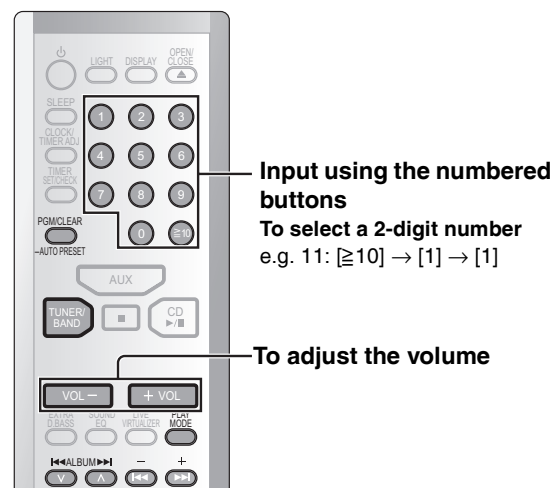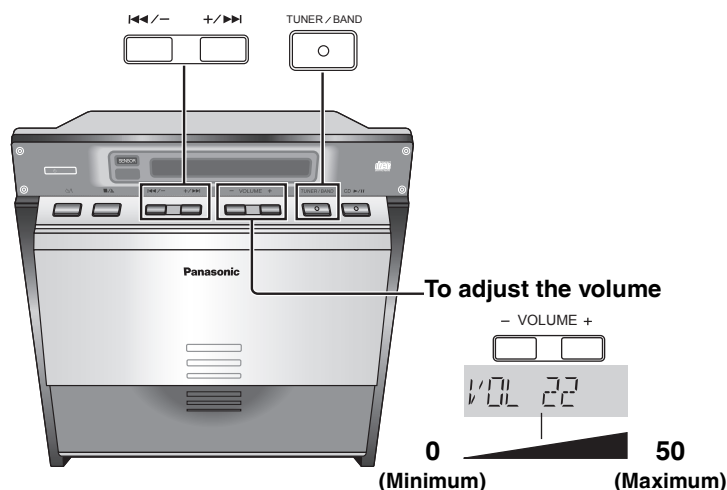

Allocation settings

Each country allocates broadcast bands according to their particular system.


You can change the FM step. The step is factory-set to 0.2 MHz, but you can change it to receive broadcasts allocated 0.1-MHz steps. Any FM frequencies preset in channels will be changed by this procedure. Preset them again.

You can change the AM step. The step is factory-set to 10 kHz, but you can change it to receive broadcasts allocated 9-kHz steps. Any AM frequencies preset in channels will be changed by this procedure. Preset them again.

1. **Select the opposite band from the one you are going to change with [TUNER/BAND].**
2. **Press and hold [TUNER/BAND] on the unit.**
After a few seconds the display changes to show the current minimum frequency. Continue to hold the button down. The minimum frequency changes and the step is changed.

To return to the original step, repeat the above steps.

To improve reception

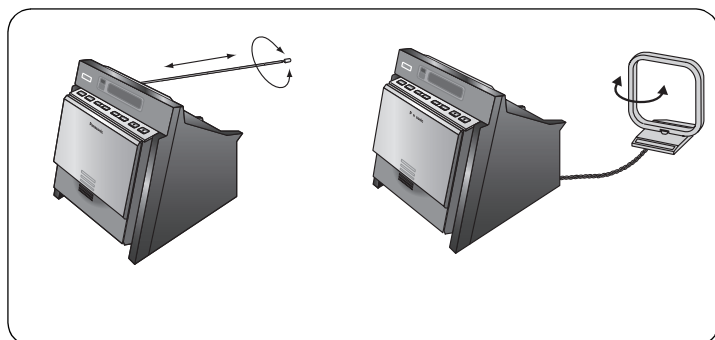

If noise is excessive in FM


You can improve FM reception by switching reception to monaural.

Timers and others




Setting the time

This is a 12-hour clock.

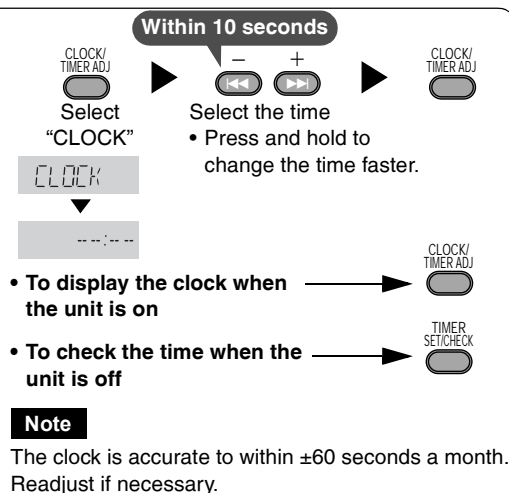


SLEEP timer

The SLEEP timer can turn the unit off after a set time.

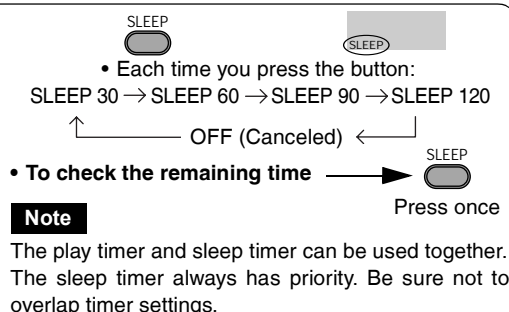


Sound quality

You can choose one of four types of sound quality.

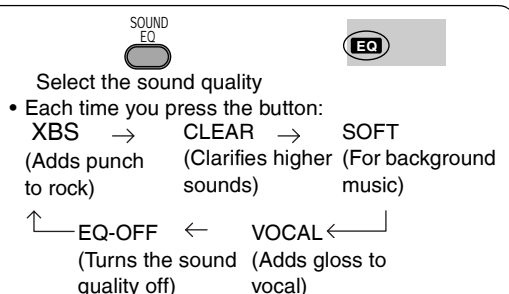


Live Virtualizer

You can create a three-dimensional sound field when listening to stereo sound.

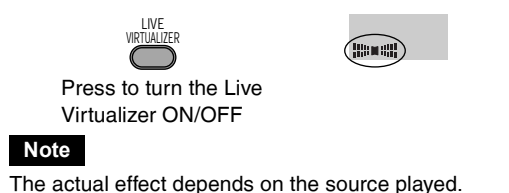

Extra D.Bass

 Boosts the bass.



Play timer


This timer starts play of the selected source at the selected time.

Preparation: Set the clock (see left).


1 Perform timer settings

① Set the start time

While the time is displayed

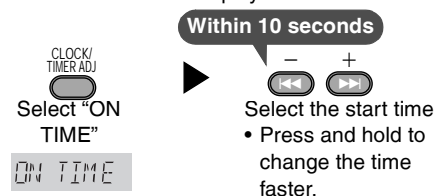


② Set the end time

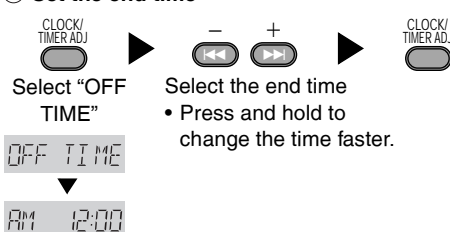

2 Select the source and adjust the volume



3 Turn the timer on

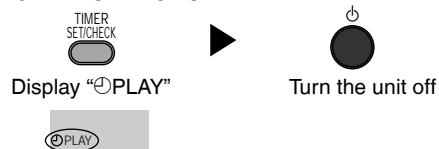


The unit must be off for the timer to operate.

Note

You can enjoy any sources while the play timer is set.

• To cancel the timer while the unit is on

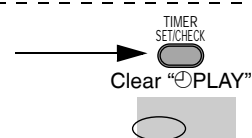


Note


The timer function will be canceled, but the settings stay in the memory.

The timer comes on every day if the timer is on.

 • To change the timer



 • To check the setting while the unit is off



Note

• If you turn the unit off and on again while the timer is functioning, the finish time setting will not be activated.

• When the "AUX" source is selected, set the timer on the connected equipment to the same time.

Display


You can change the display.

The following types of information are displayed.


- Original display
- MP3 album title display
- MP3 track title display
- Time display



MP3 operations

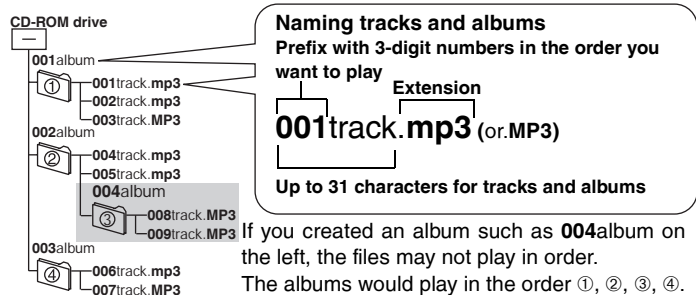

Regarding CDs

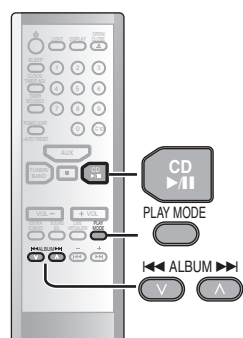


Album play

You can listen to tracks within albums.

[ALBUM] :
Album play


[ALBUM] :
Album repeat

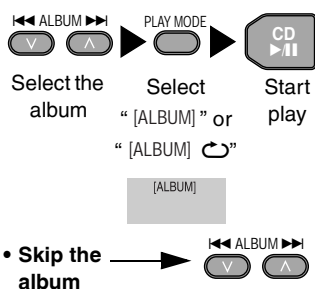

COMPACT
disc
DIGITAL AUDIO

Read these operating instructions carefully before using the unit. Follow the safety instructions on the unit and the applicable safety instructions listed below. Keep these operating instructions handy for future reference.

 - 1) Read these instructions.



CAUTION:
Change the voltage setting to suit the AC voltage in your area. See page 2.
Note that the unit will be seriously damaged or fail to operate if this setting is not made correctly.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation mark within an equilateral triangle is intended to alert the user to the presence of